



### Characteristic Curves

#### TES 3-2410WI


Efficiency vs Output Load

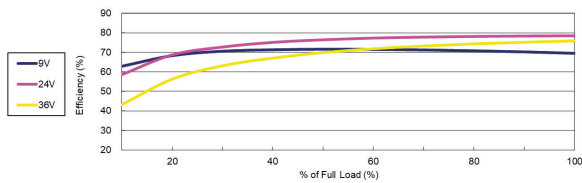


Efficiency vs Input Voltage

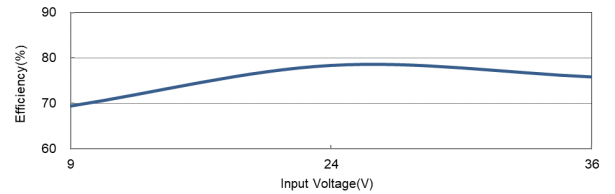

Typical Output Ripple and Noise

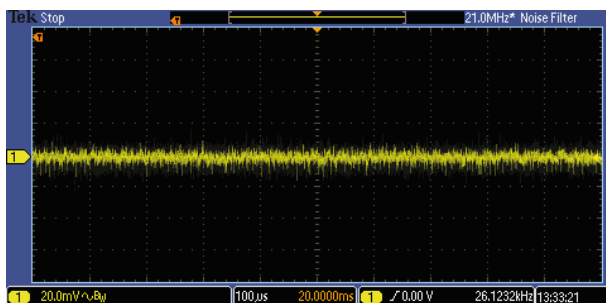

Transient Response to Dynamic Load Change (25%)

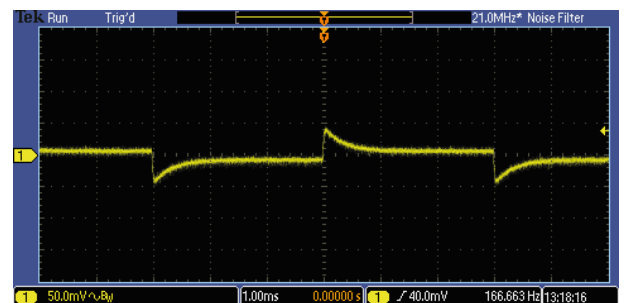


Typical Input Start-Up and Output Rise Characteristic



Remote on/off Voltage Start-Up Characteristic




Derating Output Load versus Ambient Temperature

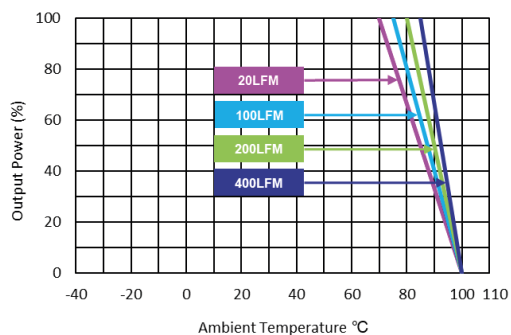


### TES 3-2411WI


Efficiency vs Output Load

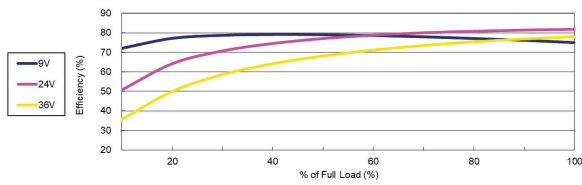


Efficiency vs Input Voltage

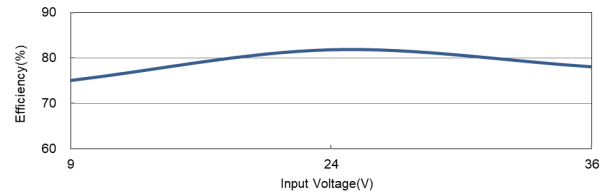


Typical Output Ripple and Noise

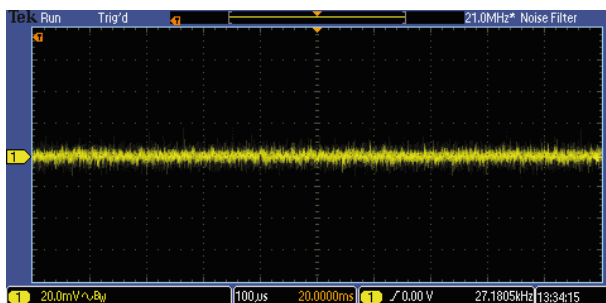


Transient Response to Dynamic Load Change (25%)

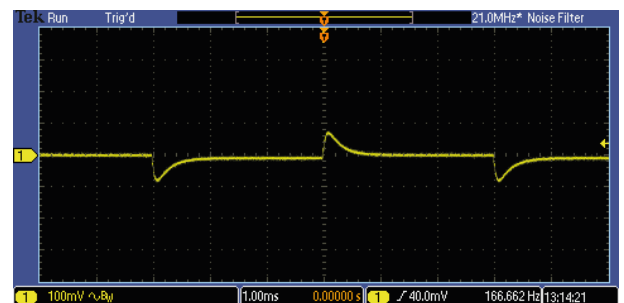


Typical Input Start-Up and Output Rise Characteristic

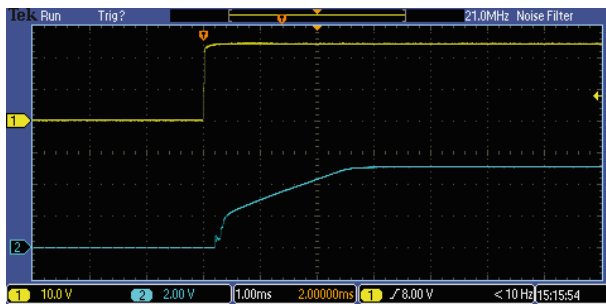

Remote on/off Voltage Start-Up Characteristic

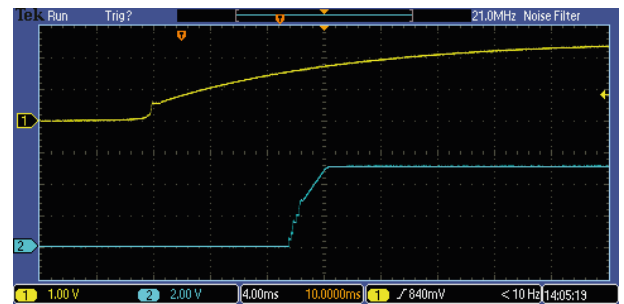


Derating Output Load versus Ambient Temperature

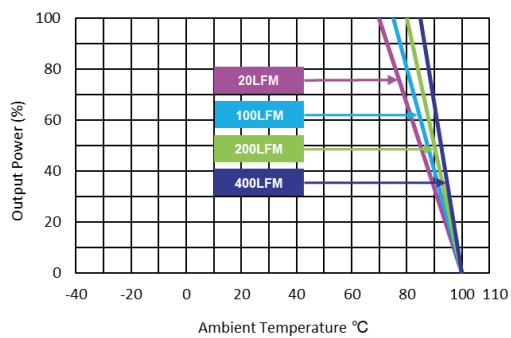


### TES 3-2412WI


Efficiency vs Output Load

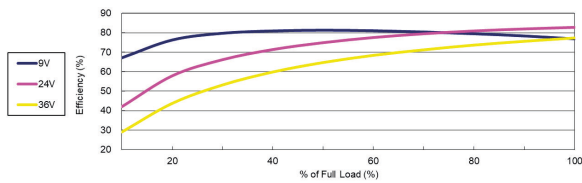


Efficiency vs Input Voltage

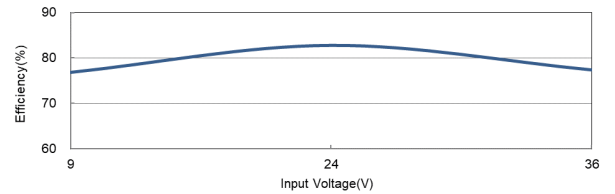

Typical Output Ripple and Noise

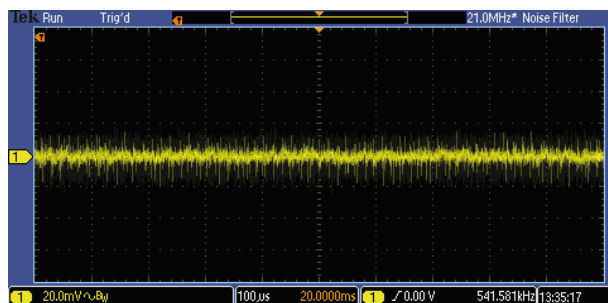


Transient Response to Dynamic Load Change (25%)

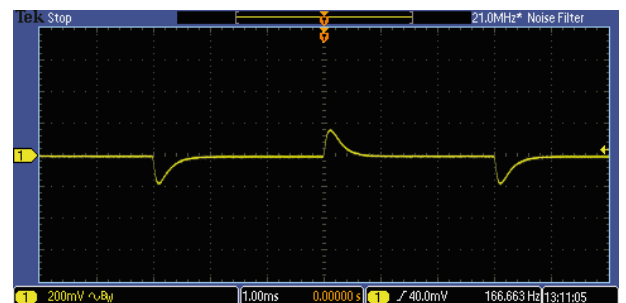


Typical Input Start-Up and Output Rise Characteristic



Remote on/off Voltage Start-Up Characteristic

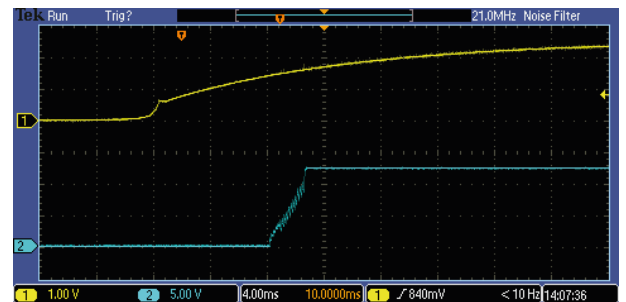


Derating Output Load versus Ambient Temperature

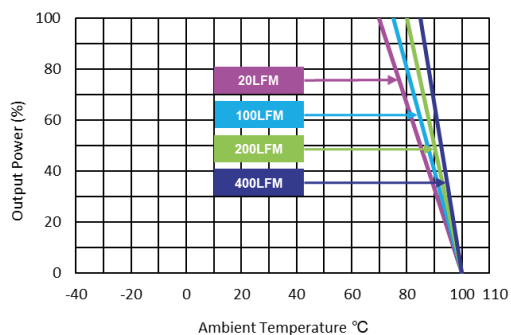


### TES 3-2413WI


Efficiency vs Output Load

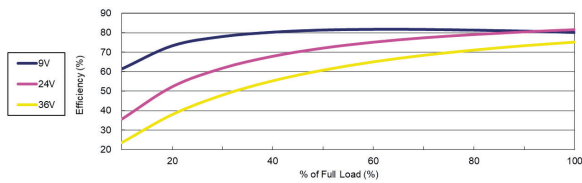


Efficiency vs Input Voltage

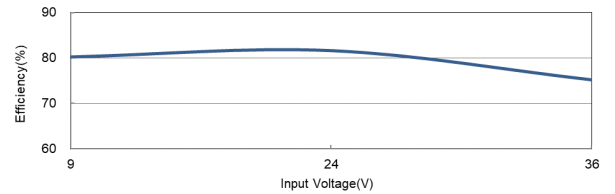


Typical Output Ripple and Noise

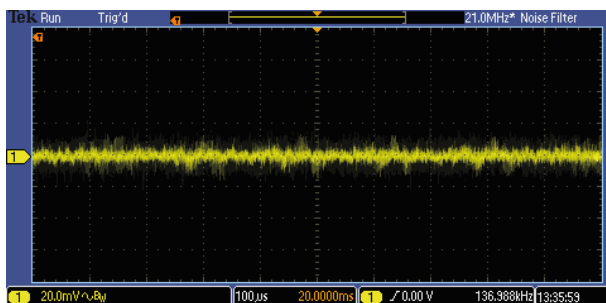

Transient Response to Dynamic Load Change (25%)

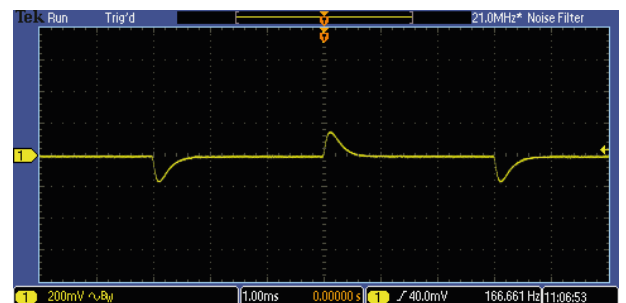


Typical Input Start-Up and Output Rise Characteristic

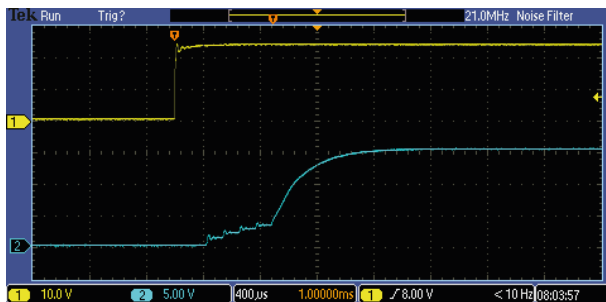

Remote on/off Voltage Start-Up Characteristic




Derating Output Load versus Ambient Temperature

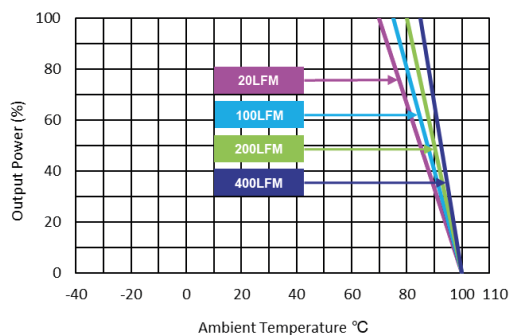


### TES 3-2421WI


Efficiency vs Output Load

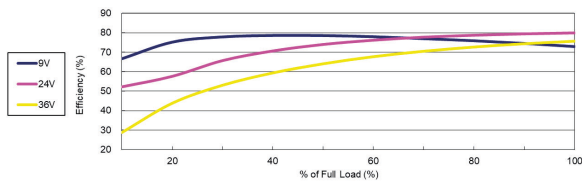


Efficiency vs Input Voltage

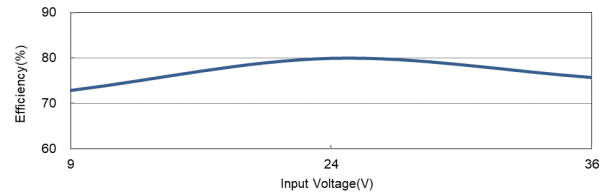


Typical Output Ripple and Noise

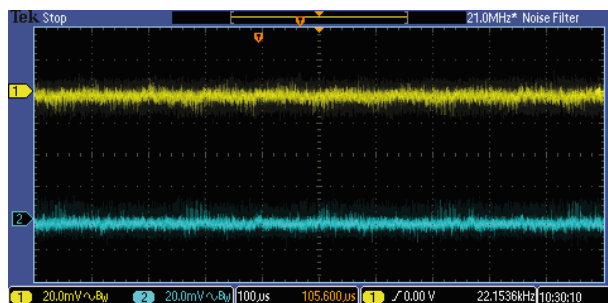


Transient Response to Dynamic Load Change (25%)

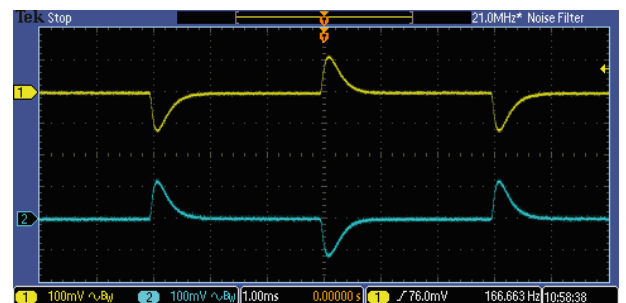


Typical Input Start-Up and Output Rise Characteristic

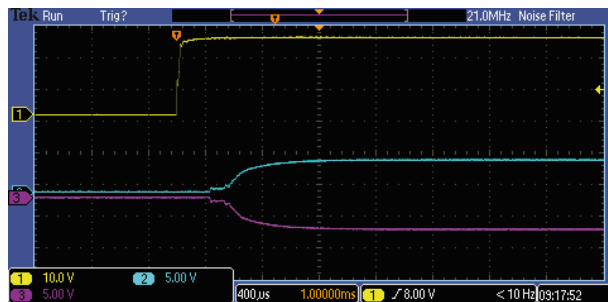

Remote on/off Voltage Start-Up Characteristic

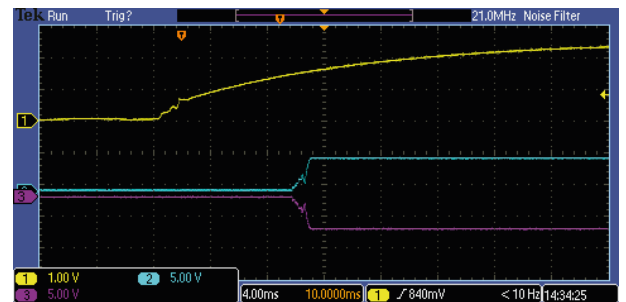


Derating Output Load versus Ambient Temperature

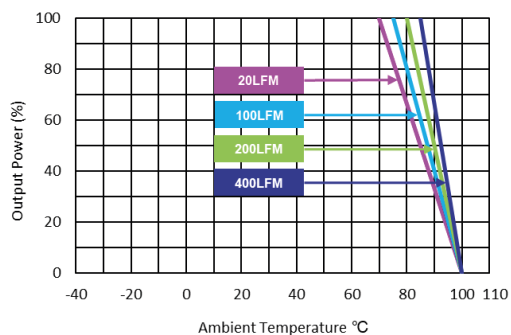


### TES 3-2422WI


Efficiency vs Output Load

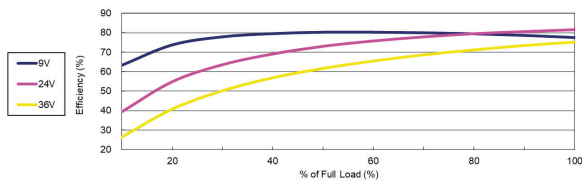


Efficiency vs Input Voltage

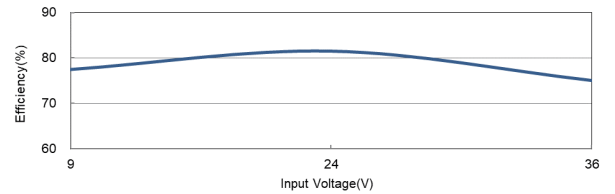


Typical Output Ripple and Noise

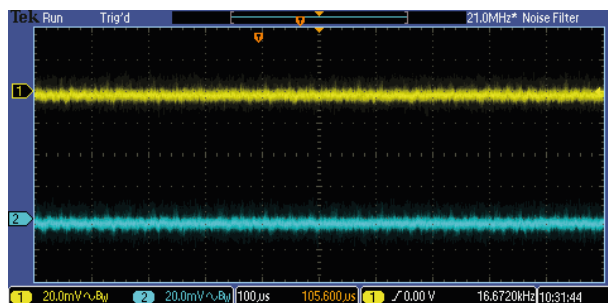


Transient Response to Dynamic Load Change (25%)

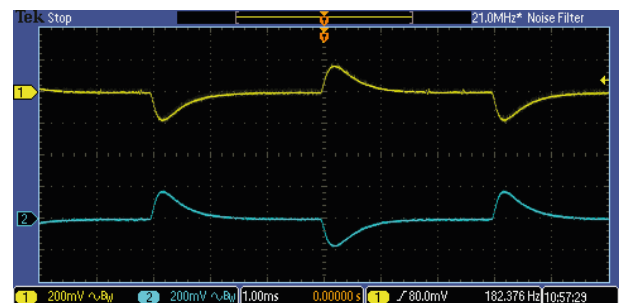


Typical Input Start-Up and Output Rise Characteristic

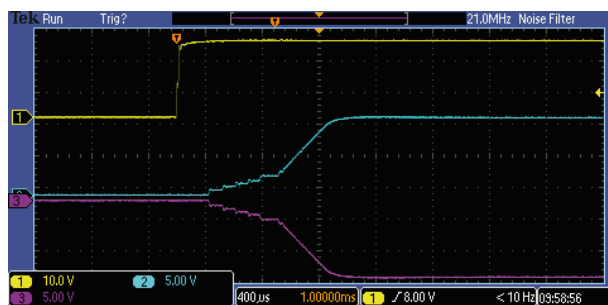

Remote on/off Voltage Start-Up Characteristic

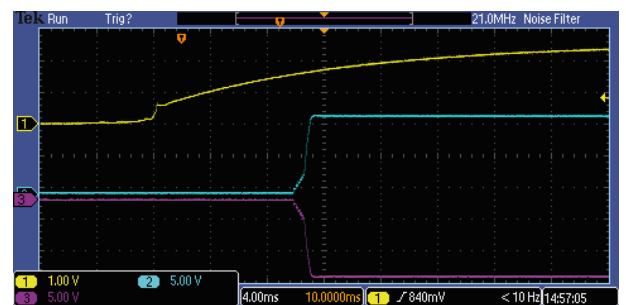


Derating Output Load versus Ambient Temperature

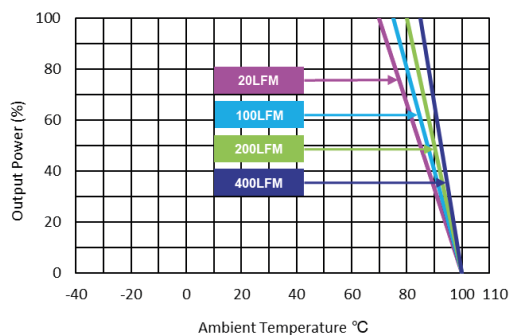


### TES 3-2423WI


Efficiency vs Output Load

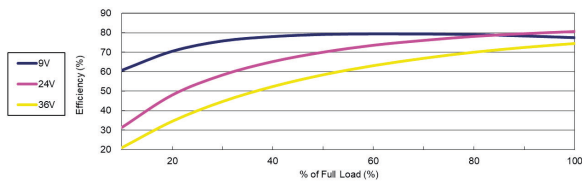


Efficiency vs Input Voltage

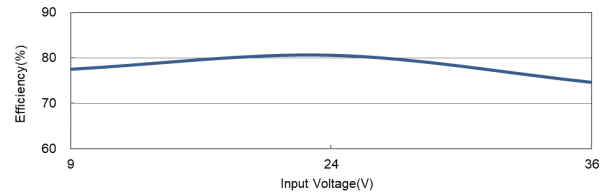


Typical Output Ripple and Noise

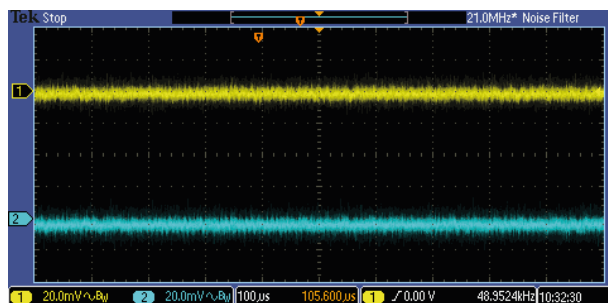


Transient Response to Dynamic Load Change (25%)

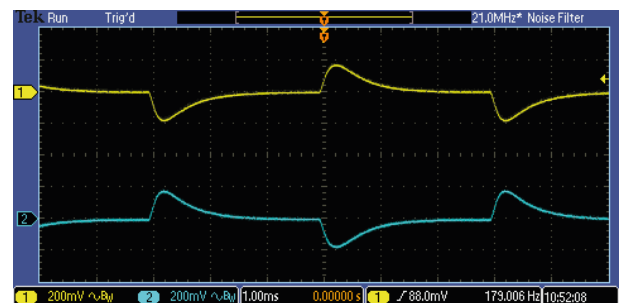


Typical Input Start-Up and Output Rise Characteristic

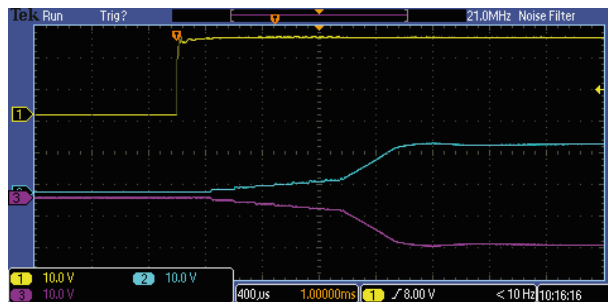

Remote on/off Voltage Start-Up Characteristic

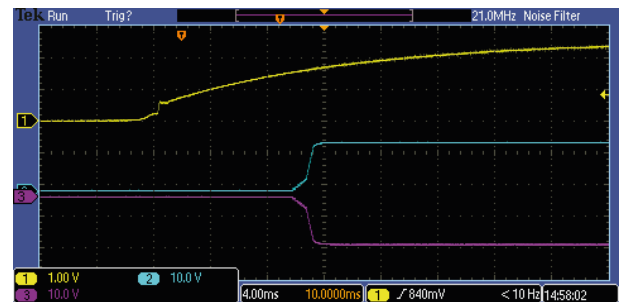


Derating Output Load versus Ambient Temperature

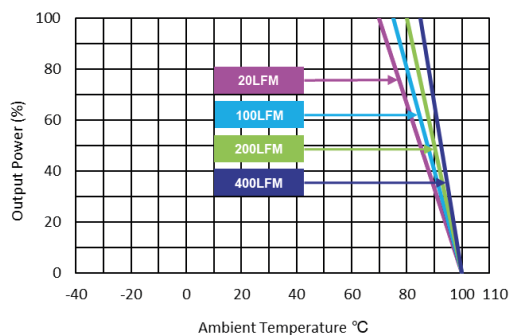


### TES 3-4810WI


Efficiency vs Output Load

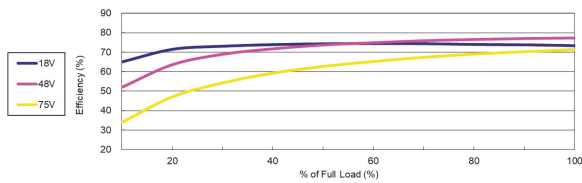


Efficiency vs Input Voltage

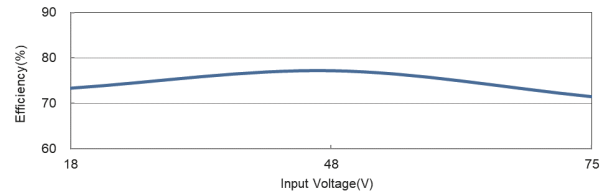

Typical Output Ripple and Noise

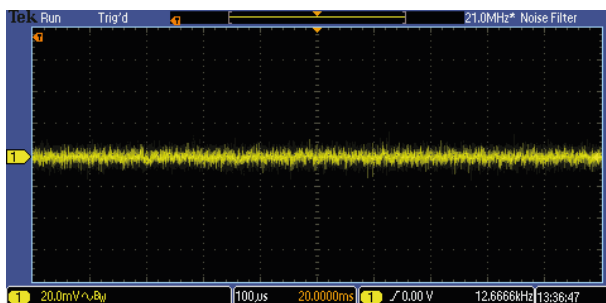

Transient Response to Dynamic Load Change (25%)

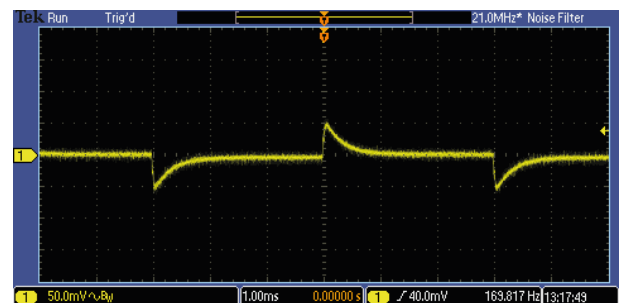


Typical Input Start-Up and Output Rise Characteristic



Remote on/off Voltage Start-Up Characteristic




Derating Output Load versus Ambient Temperature

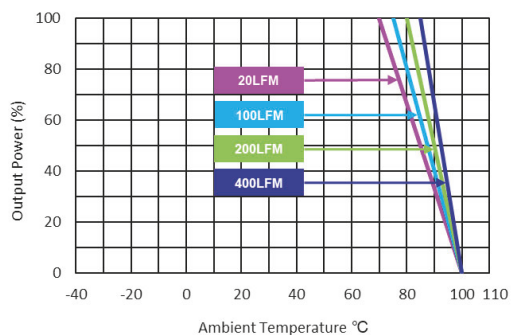




### TES 3-4811WI


Efficiency vs Output Load

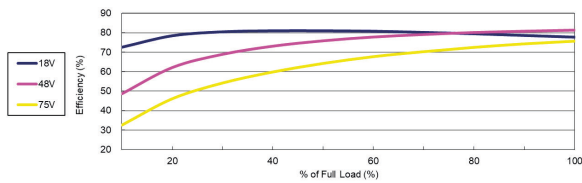


Efficiency vs Input Voltage

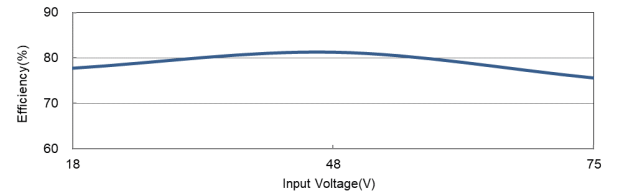


Typical Output Ripple and Noise

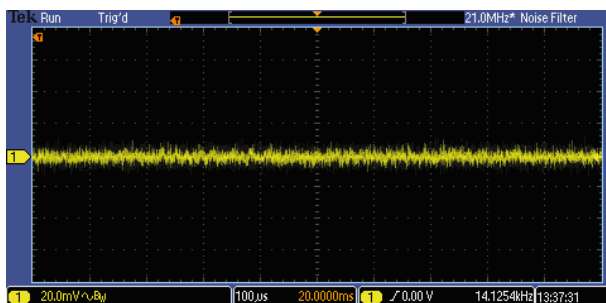


Transient Response to Dynamic Load Change (25%)

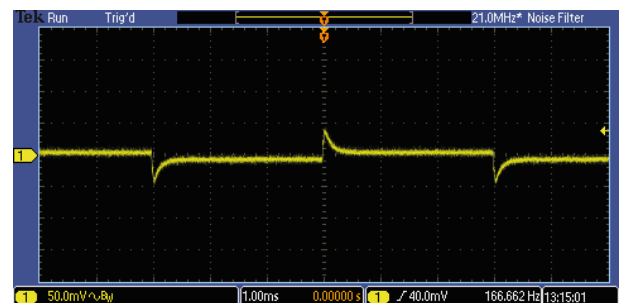


Typical Input Start-Up and Output Rise Characteristic

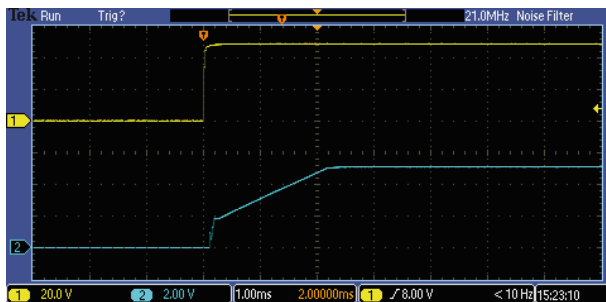

Remote on/off Voltage Start-Up Characteristic

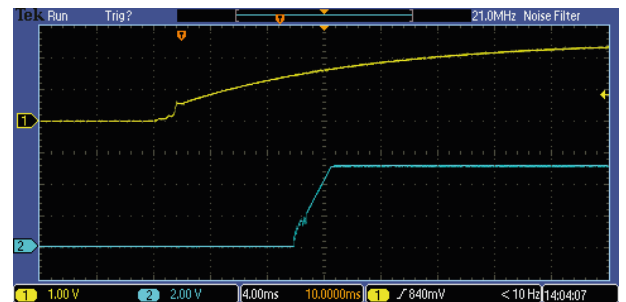


Derating Output Load versus Ambient Temperature

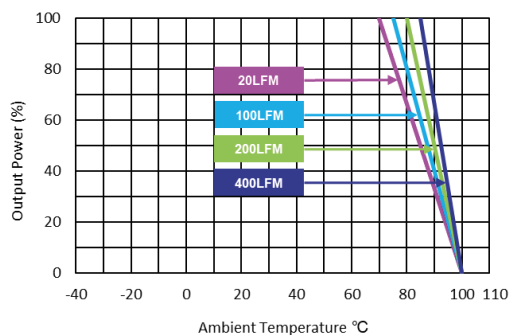


### TES 3-4812WI


Efficiency vs Output Load

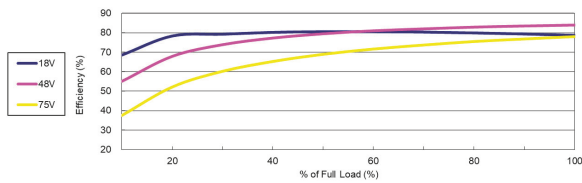


Efficiency vs Input Voltage

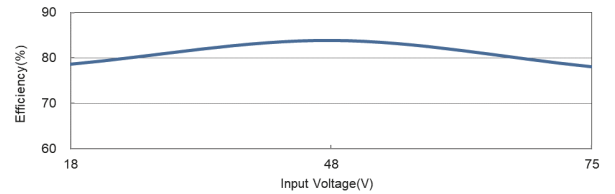


Typical Output Ripple and Noise

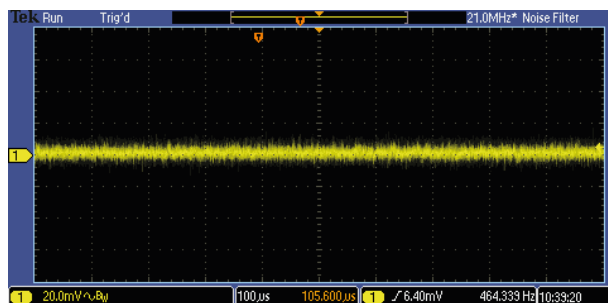


Transient Response to Dynamic Load Change (25%)

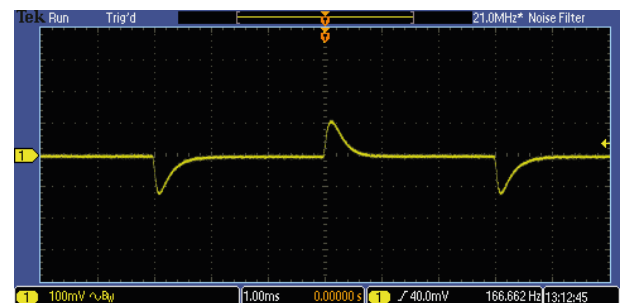


Typical Input Start-Up and Output Rise Characteristic

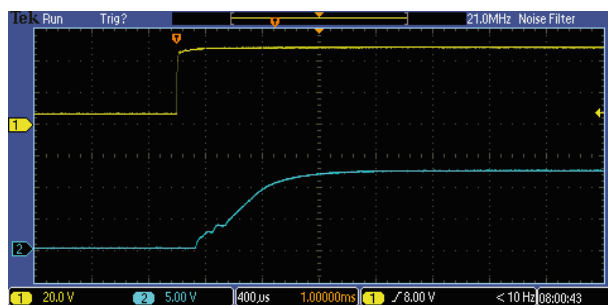

Remote on/off Voltage Start-Up Characteristic

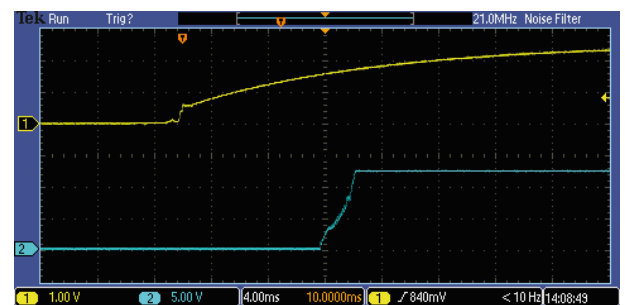


Derating Output Load versus Ambient Temperature

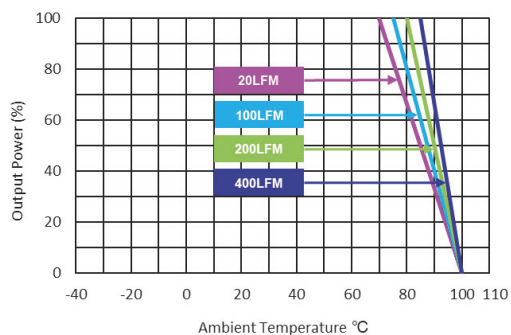


### TES 3-4813WI


Efficiency vs Output Load

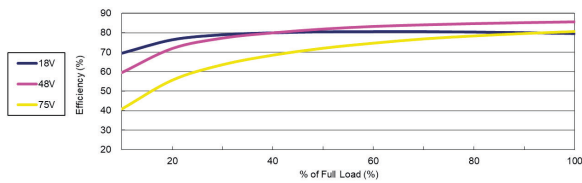


Efficiency vs Input Voltage

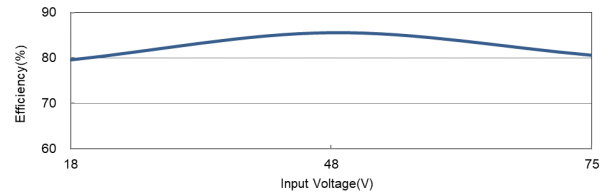


Typical Output Ripple and Noise

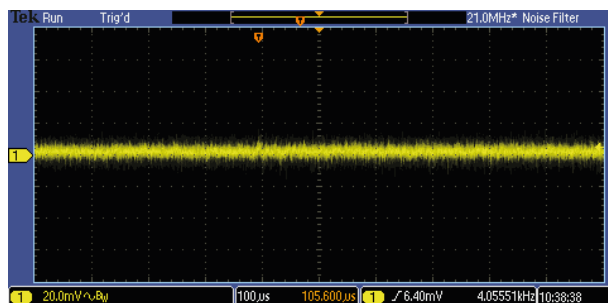


Transient Response to Dynamic Load Change (25%)

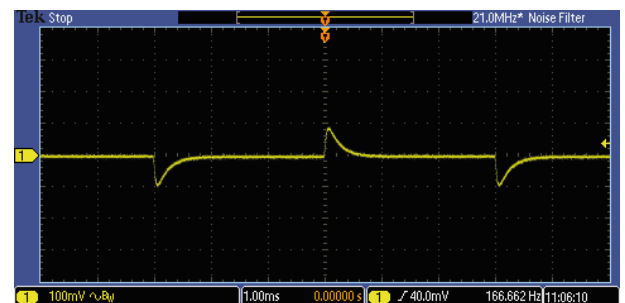


Typical Input Start-Up and Output Rise Characteristic

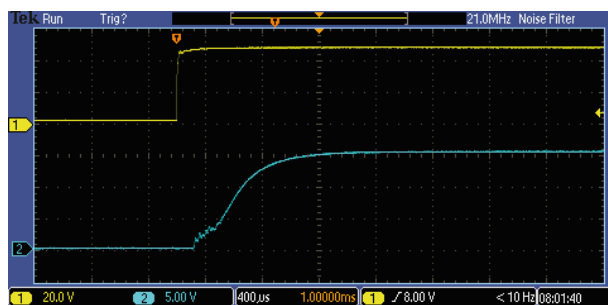

Remote on/off Voltage Start-Up Characteristic

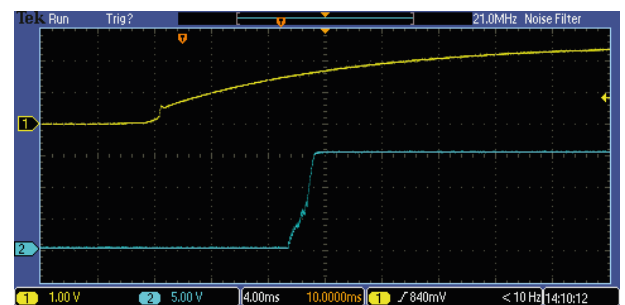


Derating Output Load versus Ambient Temperature

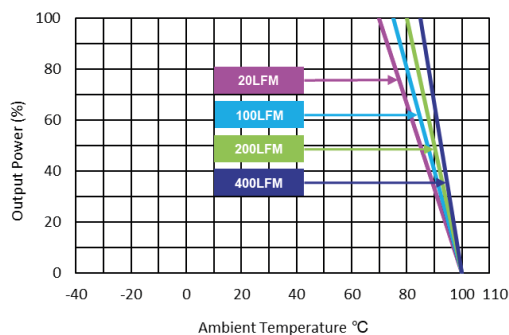


### TES 3-4821WI


Efficiency vs Output Load

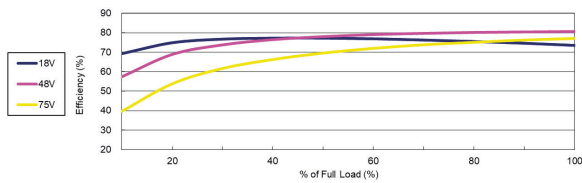


Efficiency vs Input Voltage

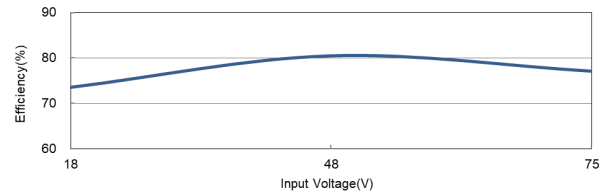


Typical Output Ripple and Noise

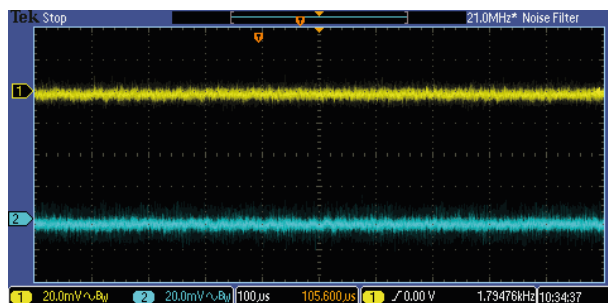


Transient Response to Dynamic Load Change (25%)

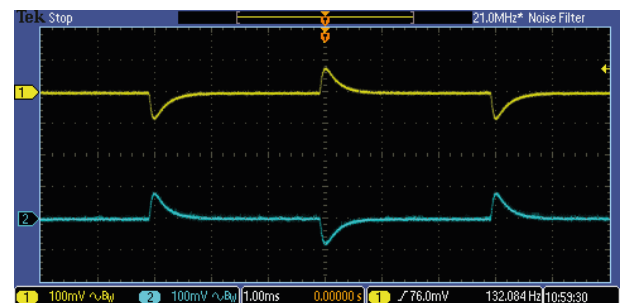


Typical Input Start-Up and Output Rise Characteristic

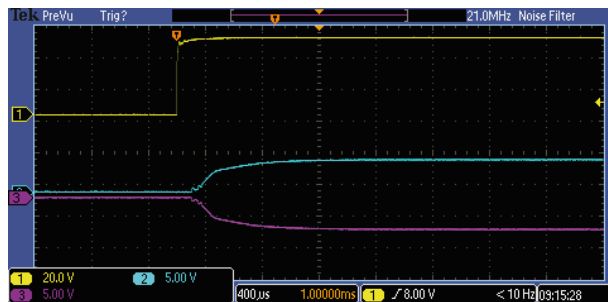

Remote on/off Voltage Start-Up Characteristic

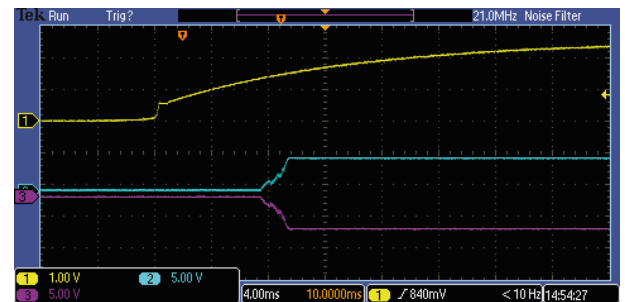


Derating Output Load versus Ambient Temperature

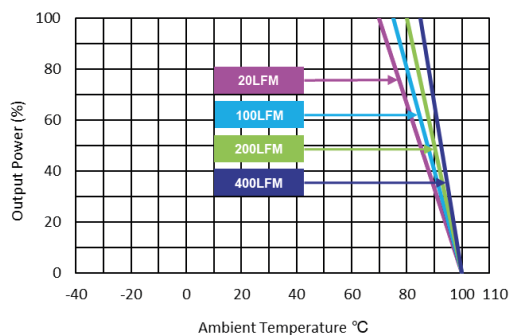


### TES 3-4822WI


Efficiency vs Output Load

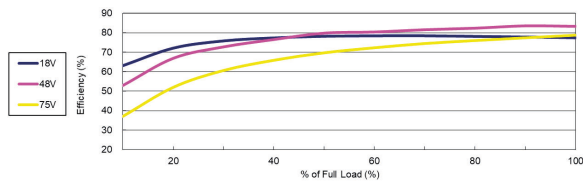


Efficiency vs Input Voltage

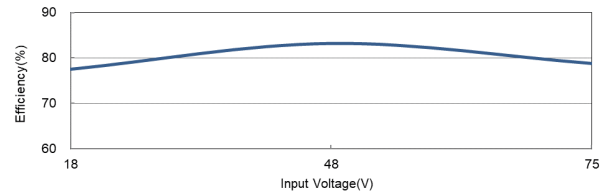


Typical Output Ripple and Noise

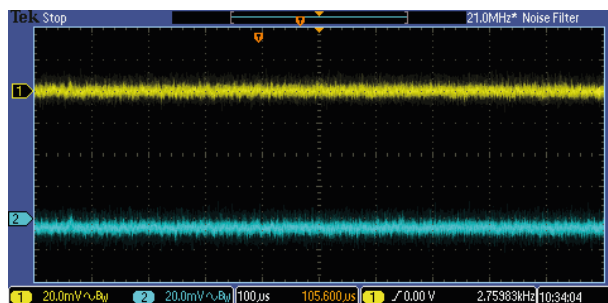

Transient Response to Dynamic Load Change (25%)

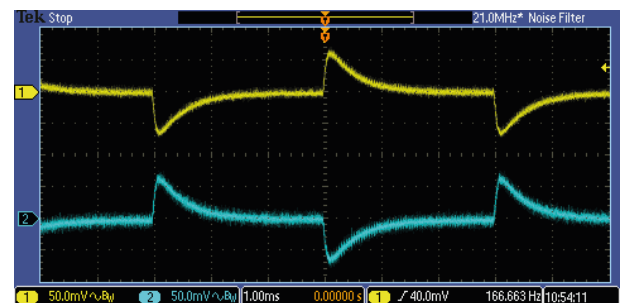


Typical Input Start-Up and Output Rise Characteristic

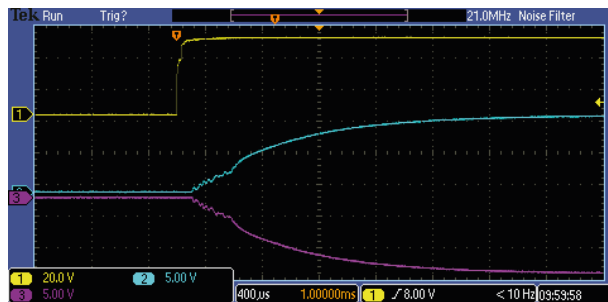

Remote on/off Voltage Start-Up Characteristic




Derating Output Load versus Ambient Temperature

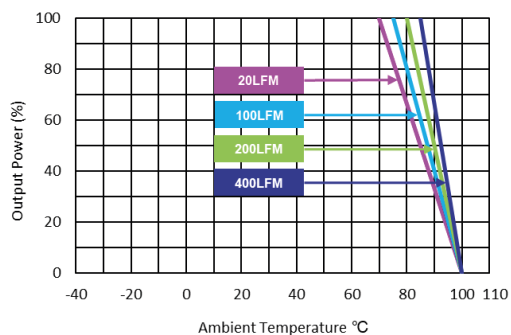


### TES 3-4823WI


Efficiency vs Output Load

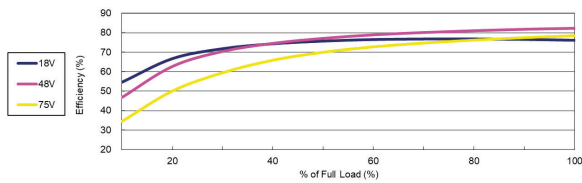


Efficiency vs Input Voltage

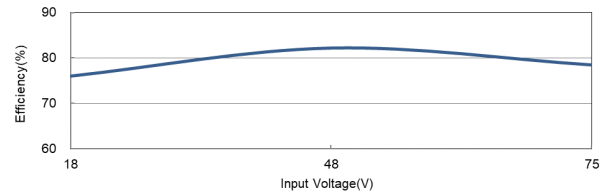


Typical Output Ripple and Noise

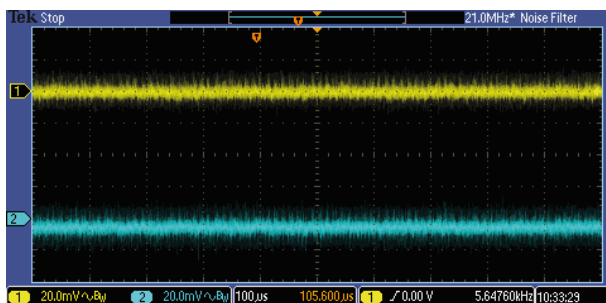

Transient Response to Dynamic Load Change (25%)

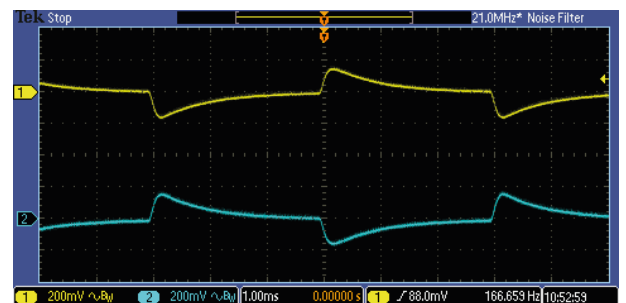

Typical Input Start-Up and Output Rise Characteristic

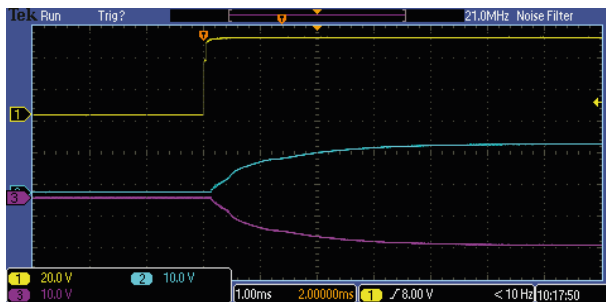

Remote on/off Voltage Start-Up Characteristic



Derating Output Load versus Ambient Temperature

